


 





PROGRAMMING LEVEL 1

Note :

1. Push the button  once per display.
2. Option settings may be changed by pushing the buttons  .
3. Depending on current valve programming, some displays will not be viewed or set.



The valve is in service position. To enter in the first level, push and hold the button  for 5 seconds.

1.1. Water hardness in °tH
Ex. : 25 °tH [- - - - -25]

1.2. Water hardness after mixing valve in °tH
Ex. : 6 °tH [P - - - -6]

1.3. System capacity in m³ °tH
Ex. : 30 m³ °tH [- - - - -30]

1.4. Regeneration time
Ex. : 2:00 A.M. [- - 2:00 -]

Cycle time settings :

1.5. Pause cycle to prepare the brine
Ex. : 30 min. [2 - - 30.0]

1.6. Brine draw & slow rinse
Ex. : 50 min. [3 - - - 50.0]

1.7. Backwash
Ex. : 8 min. [4 - - - - 8.0]

1.8. Rapid rinse
Ex. : 10 min. [5 - - - 10.0]




1.9. Not used [6 - - - OFF]

Level # 1 exit.
The valve returns in normal operation.





PROGRAMMING LEVEL 2

Note :

1. Push the button  once per display.
2. Option settings may be changed by pushing the buttons  .
3. Depending on current valve programming, some displays will not be viewed or set.



The valve is service position. To enter in the second level, push and hold the button  for 5 seconds.

Then depress the button  5 seconds
You are in second level.

- | | |
|---|---|
| 2.1. Flow rate in l/mn
<i>non adjustable</i> | [Fr - - - 0] |
| 2.2. Days since the last regeneration
<i>non adjustable</i> | [d - - - 0] |
| 2.3. Prior service volume used in litre
<i>non adjustable</i> | [E - - 2800] |
| 2.4. Reserve capacity in litre
<i>non adjustable</i> | [rc - - 450] |
| 2.5. Previous day water usage in litre
<i>non adjustable</i> | [Pd - - 400] |
| 2.6. Indicator of chlorinating
Ex. : - no chlorinating indicator | [J - - - OFF] |
| 2.7. Regeneration day override
Ex. : - override every 7 days
- cancel setting | [A - - - OFF] |
| 2.8. Volume override in litre
Ex. : setting not used | [b - - OFF] |
| 2.9. Display format
Ex. : litre format
Ex. : cubic meter format | [U - - - - 2]
[U - - - - 4] |
| 2.10. Valve type
- 6700 | [o - - - - 2] |
| 2.11. Regeneration type
- variable brining | [7 - - - - 4] |
| 2.12. Volume of resine
Ex. : 15 litres | [7r - - - 15.0] |
| 2.13. Salt setting
Ex. : 120 g of salt/litre of resine | [7d - - 120] |
| 2.14. BLFC size
See the label on the injector housing | [7b - - X.XX] |
| 2.15. Meter size
- standard 3/4" | [F - - - - 1] |
| 2.16. Mixing valve location
- no mixing valve
- mixing valve before flow meter
- mixing valve after flow meter | [8 - - - - 1]
[8 - - - - 2]
[8 - - - - 3] |
| 2.17. System type
- single electronic | [9 - - - - 4] |
| 2.18. Program lockout
Ex.: - lockout cancelled
- lockout active | [PI- - OFF]
[PI- - ON] |

Level #2 exit.
The valve returns in normal operation.